



BWJ2~4					
No.	Part Name	No.	Part Name	No.	Part Name
106-2	Inlet housing assembly	520-1	Long round sleeve	592	Base
107	Outlet housing	520-2	Short round sleeve I	801	Motor
112-1	Deflector	520-3	Short round sleeve II	900-1	Type 1 Non-Metallic Insert Hex Lock Nuts
112-2	Deflector with shaft	520-4	Bushing	900-2	Type 1 hex nut
230	Impeller	529	Bearing inner race	900-3	Hexagon socket head cap screws
410-1	Gasket	550-1	Adjusting washer	903	Bleed cock
412-1	O-ring sea	550-2	Standard spring washer	905	Tie rod
433	Mechanical seal	550-3	Standard spring washer		